



## Light and Fan Switch

(Models 501R, 501,F 601R, 601F)

The light and fan switches are mounted to the top section of the unit grille. To access and remove the light and/or fan switches, the lower section of unit grille will need to be removed first. Now, open cabinet door and extract the screws at the top left and right corners. Pull upper grille assembly forward slightly and disconnect the electrical leads from the switch being removed. Depress the tabs on each side of the switch while pushing the switch out of the opening in the grille top section.

