



Condenser

Water Filtration System Air Purification System Adjustable Shelves

6

Refrigerator Drawers Door Shelves

Touch Control Panel

Temperature can be adjusted in one-degree increments on the home screen. The refrigerator temperature is preset at 38°F (3°C).

To adjust temperature, touch the temperature. Touch + or until the desired temperature is displayed.

To adjust additional settings, touch $\{\widecheck{0}\}$ on the control panel.



Home Screen

Settings

	Adjust refrigerator drawer temperature and humidity	
Ŧ	Turn air purifier on or off	
-0,-	Adjust soft on lighting and accent lighting (if applicable)	
<u>Ó</u>	Turn night mode on or off	
	Turn the internal dispenser on or off (if applicable)	
\bigcirc	Turn door alarm on or off and adjust duration	
())	Adjust door alarm volume and tone	
	Turn water filter reminder on or off	
(((;	Turn connect on or off (if applicable)	
\bigcirc	Turn the unit on or off	
K	Turn Sabbath on or off	
°∽	Adjust temperature units	
Q	Select language	
(j)	System information	
ß	View troubleshooting and service information	

For service and support, call 800-222-7820, or visit subzero.com.

USE AND CARE

1	Condenser Clean the condenser every 6–12 months using a soft-bristle brush. To clean, turn power off at the con- trol panel, rotate the bottom edge of the grille upward, and vacuum the condenser in the direction of the fins (up and down).	CONDENSER
2	Water Filtration System Located behind the grille, the water filter is rated for 750 gallons or one year, whichever comes first. "Change Water Filter" appears on the control panel when the filter needs to be replaced. Replacement filters can be ordered online at subzero.com/store.	WATER FLIER 000 000 000 000 000 000 000 0
3	Air Purification System Located on the back wall of the refrigerator, the air purification car- tridge lasts approximately one year. "Change Air Purifier" appears on the control panel when the cartridge needs to be replaced. Replacement cartridges can be ordered online at subzero.com/store.	AIR PUBLICR
4	Adjustable Shelves To remove a shelf, tilt the shelf up, then lift up and out. To install, insert the shelf in the tracks along the back wall, then lower the front until it locks into position.	
5	Refrigerator Drawers To remove, pull the drawer open until it stops. Lift the front of the drawer slightly and pull straight out. To install, pull the drawer carrier out and align the bottom of the drawer with the carrier. Slide the drawer back into position.	
6	Adjustable Door Shelves To remove a door shelf, lift the shelf from the bottom and slide out. To install, place in the desired position and slide the shelf down onto the guides.	

SUB*ZERO



9044569-004 REV-F

USE AND CARE