

1 Condenser

2 Water Filtration System

3 Air Purification System

4 Adjustable Shelves

5 Refrigerator Drawers

6 Freezer Drawers


7 Ice Bin

8 Door Shelves

Touch Control Panel

Temperatures can be adjusted in one-degree increments on the home screen. Combination units have separate temperature controls for refrigerator and freezer. Temperatures are preset at 38°F (3°C) and 0°F (-18°C).

To adjust temperature, touch the temperature to be adjusted. Touch + or – until the desired temperature is displayed.

To adjust additional settings, touch  on the control panel.



Home Screen

Settings



Adjust refrigerator drawer temperature and humidity



Turn ice maker and max ice on or off



Turn air purifier on or off



Adjust soft on lighting and accent lighting (if applicable)



Turn night mode on or off



Turn the internal dispenser on or off (if applicable)



Turn door alarm on or off and adjust duration



Adjust door alarm volume and tone



Turn water filter reminder on or off



Turn connect on or off (if applicable)



Turn the unit on or off



Turn Sabbath on or off



Adjust temperature units



Select language



System information

 


View troubleshooting and service information

For service and support, call 800-222-7820, or visit subzero.com.


1 Condenser

Clean the condenser every 6–12 months using a soft-bristle brush. To clean, turn power off at the control panel, rotate the bottom edge of the grille upward, and vacuum the condenser in the direction of the fins (up and down).

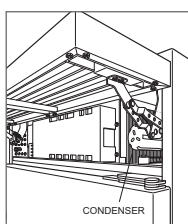


2 Water Filtration System

Located behind the grille, the water filter is rated for 750 gallons or one year, whichever comes first. “Change Water Filter” appears on the control panel when the filter needs to be replaced. Replacement filters can be ordered online at subzero.com/store.

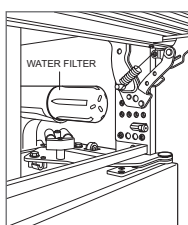


3 Air Purification System

Located on the back wall of the refrigerator, the air purification cartridge lasts approximately one year. “Change Air Purifier” appears on the control panel when the cartridge needs to be replaced. Replacement cartridges can be ordered online at subzero.com/store.

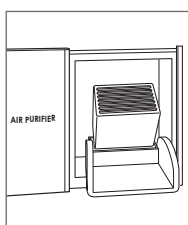


4 Adjustable Shelves

To remove a shelf, tilt the shelf up, then lift up and out. To install, insert the shelf in the tracks along the back wall, then lower the front until it locks into position.

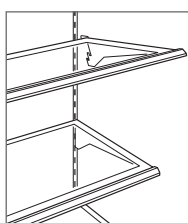


5 Refrigerator Drawers

To remove, pull the drawer open until it stops. Lift the front of the drawer slightly and pull straight out. To install, pull the drawer carrier out and align the bottom of the drawer with the carrier. Slide the drawer back into position.

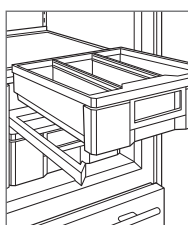


6 Freezer Drawers

To remove, pull the drawer open until it stops. Pull the two tabs (bottom corners of the drawer) forward, then lift up and out. To install, push the drawer slides in. Align the drawer with the slides and push back. Press down on the front of the drawer to engage the slides.

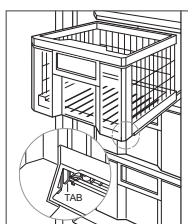


7a Ice Bin (non-dispenser model)

To remove, pull the ice bin forward until it stops. Lift the ice bin straight up. To install, pull the carrier out and align the bottom of the ice bin with the carrier. Slide back into position. The ice bin refills from empty in approximately 24 hours.

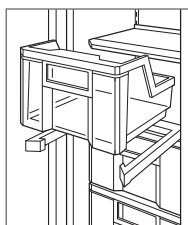


7b Ice Bin (dispenser model)

To remove the ice bin, pull the ice bin forward until it stops. Lift to clear the carrier assembly along the back, then pull forward and out. The ice bin refills from empty in approximately 24 hours.

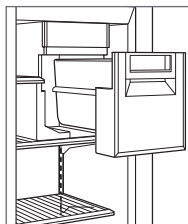

8 Adjustable Door Shelves

To remove a door shelf, lift the shelf from the bottom and slide out. To install, place in the desired position and slide the shelf down onto the guides.

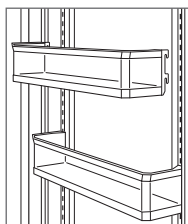

9044569-003 REV-F