

- | | | | |
|----------|-------------------------------------|-----------|------------------------------|
| 1 | Condenser | 7a | Ice Bucket |
| 2 | Water Filtration System | 7b | Ice Bucket (dispenser model) |
| 3 | Air Purification System | 8 | Freezer Baskets |
| 4 | Refrigeration Drawers | 9 | Dairy Compartment |
| 5 | Removable Dividers | 10 | Door Shelves |
| 6 | Overhead Lighting and Control Panel | 11 | Adjustable Shelves |

Electronic Control Panel Key



0°F Displays the freezer temperature. Controlled by the COLDER and WARMER keys on the control panel.

 Illuminates or flashes if the condenser needs cleaning or if the electronic control panel has detected a problem with the unit.

 Illuminates when the ice maker is on. Activated by the ICE MAKER key on the control panel.

 Illuminates when MAX ICE is activated. Controlled by the MAX ICE key on the control panel. The MAX ICE feature remains active for 24 hours after key is pressed.

 Illuminates when the water filter cartridge needs to be replaced.

 Illuminates when the alarm is activated. Flashes and chimes when the door has been left ajar. Controlled by the ALARM key on the control panel.

 Illuminates when the air purifier is activated. Flashes when the air purifier cartridge needs to be replaced.

38°F Displays the refrigerator temperature. Controlled by the COLDER and WARMER keys on the control panel.


Thank you for making Sub-Zero part of your home. As the refrigeration specialist, Sub-Zero is wholly committed to preserving the freshness and flavor of your food and to ensuring your enjoyment of our products.

For service and support, or to register your Sub-Zero, you may reach us 24 hours a day at 800-222-7820, or visit us at subzero.com.




1 Condenser

Clean condenser every 3 to 6 months using a soft-bristle brush. To clean, turn the unit off, flip up the grille, and brush and vacuum the condenser in the direction of the fins (up and down).

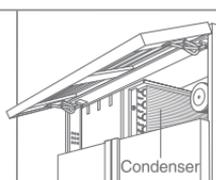


2 Water Filtration System

Replace water filter cartridge when indicator light on control panel is illuminated. Cartridge is expected to last up to 1 year. To order new cartridges, call 800-222-7820 or visit subzerowolfstore.com. Press and hold the water filter reset button located in condenser area for 5 seconds to reset after changing filter.

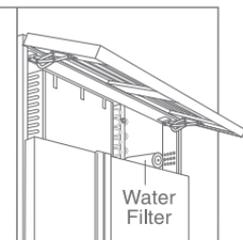


3 Air Purification System

Located inside refrigerator on right-hand side of back wall. Replace air purifier cartridge when indicator light on control panel is flashing. Cartridge is expected to last up to 1 year. To order new cartridges, call 800-222-7820 or visit subzerowolfstore.com. After replacing cartridge, press and hold PURE AIR key for 5 seconds to reset.

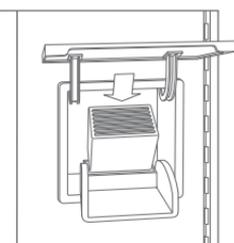


4 Refrigeration Drawers

To remove, pull open until drawer stops. Lift front of drawer slightly and pull straight out. To reinstall, push the drawer slides back into the refrigerator, align drawer with the slides, then push the drawer straight back onto the slides. Press downward on the front of the drawer to engage the slides.

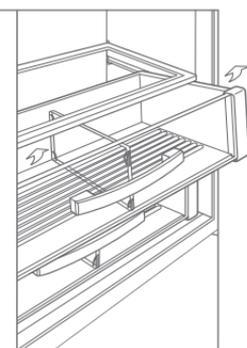

5 Removable Dividers

To remove, lift divider up until it stops. Rotate divider counterclockwise. Reverse these steps to replace.

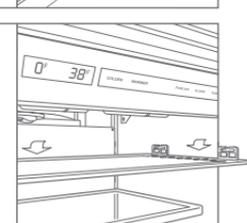


6 Overhead Lighting and Control Panel

To replace bulb, slide light shield slowly back until the slots on the side of the shield drop past the mounting studs. See reverse for more information on the electronic control panel symbols.




7a Ice Bucket (non-dispenser model)

To remove bucket, pull the bucket toward you until it stops, then lift it out. Bucket refills from empty in approximately 24 hours.

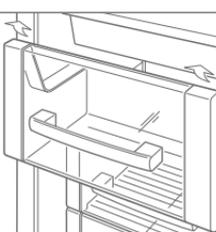

7b Ice Bucket (dispenser model)

To remove the ice bucket, pull the bucket out part of the way, then rotate the right side of the bucket as you continue to pull the bucket out. **IMPORTANT NOTE:** Ice may fuse together if not used regularly. To avoid, empty ice in bucket monthly.

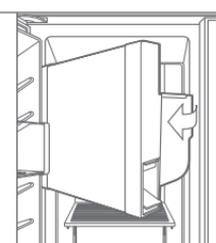


8 Freezer Baskets

To remove, pull out until basket stops. Behind the bottom corners of the front face of the basket are metal clips. Pull the metal clips forward, then lift and rotate the basket up. To reinstall, push drawer slides back into the freezer. Align and push the basket onto the slides. Press down to engage clips.



9 Dairy Compartment

Maintains the ideal humidity and temperature for dairy products.

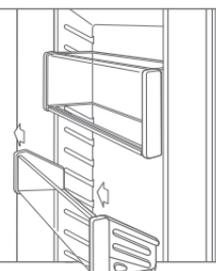

10 Door Shelves

To remove, slide up and out of the guide tracks. To reinstall, place in desired position and slide down into the tracks.



11 Adjustable Shelves

To remove or adjust a shelf, tilt the shelf up at the front, then lift it up and out of the tracks on the rear wall of the refrigerator. If the door opens only 90°, lift and pivot the end of the shelf nearest the door and remove.



SUBZERO



7020101SREVB