



- | | |
|----------------------------------|----------------------------------|
| 1 Condenser | 7 Adjustable Shelves |
| 2 Water Filtration System | 8 Slide-Out Bins |
| 3 Air Purification System | 9 Pull-Out Shelf |
| 4 Crisper Lid | 10 Ice Container |
| 5 Removable Dividers | 11 External Touch Display |
| 6 Storage Drawers | |

Electronic Control System



Freezer Display



Refrigerator Display

External Touch Display

To unlock the display, touch and hold  for three seconds. The display will lock automatically after 30 seconds of inactivity.

To adjust the temperature, touch the temperature displayed next to the corresponding zone icon.

To turn the ice maker on or off or to active max ice, touch the ice cube(s) icon.

To access the settings menu, touch  on either external touch display.


Settings

-  Activate or deactivate power to the unit
-  Enable or disable automatic display lock
-  Activate, deactivate, or refresh purifier life reminder
-  Enable or disable door/drawer alarm and duration
-  Enable or disable connect
-  Enable, disable reminder, or refresh filter life reminder
-  Enable or disable Sabbath mode
-  Adjust soft on lighting and accent lighting (if applicable)
-  Adjust temperature units
-  Adjust alarm volume and tone
-  Select language
-  View troubleshooting and service information




1 Condenser

The condenser is located behind the grille. To access, pull out on the bottom edge of the grille and rotate upward. Use a soft bristle brush and vacuum to remove dust and lint from the condenser. Clean the condenser every three to six months.

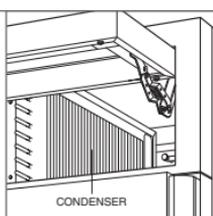


2 Water Filtration System

'Change Water Filter' will appear on the control panel when the cartridge needs to be replaced. Touch 'Snooze' to delay reminder for 24 hours or until filter can be replaced. To order new cartridges visit subzerowolfstore.com. Once the cartridge has been replaced, follow instructions on the control panel.

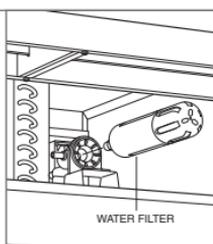

3 Air Purification System

'Change Air Filter' will appear on the control panel when the cartridge needs to be replaced. Touch 'Snooze' to delay reminder for 24 hours or until filter can be replaced. To order new cartridges visit subzerowolfstore.com. Once the cartridge has been replaced, follow instructions on the control panel.

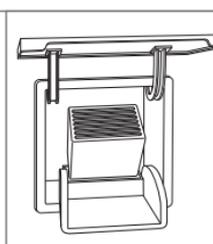


4 Crisper Lid

To remove, pull the upper refrigerator drawer all the way out, raise the front edge of the crisper lid up and pull out from the back.


5 Removable Dividers

Dividers are interchangeable between the upper and lower refrigerator drawers. To remove, first lift short dividers up and out of supports, then lift long dividers up and out of drawer support tabs.

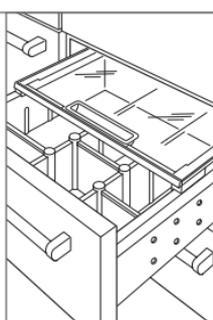


6 Storage Drawers

Refrigerator and freezer storage drawers are removable. An automatic stop is built in to prevent drawers from coming all the way out unintentionally. To remove, pull the drawer all the way out, lift up evenly on both sides of the drawer front and pull out.

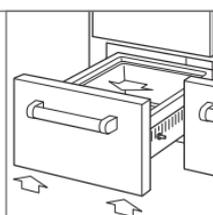


7 Adjustable Shelves

Glass shelves in the refrigerator and stainless steel freezer shelves are adjustable. To remove or adjust, tilt up, then lift up and out. To reposition, insert shelf in the tracks along the back wall, then lower the front until it locks into position.

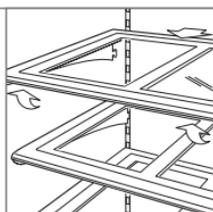


8 Refrigerator Slide-Out Bin

Integrated rails mounted below the glass shelves allow slide-out bins to be positioned in a variety of locations. To remove or adjust a slide-out bin, pull the handle of the bin forward until it stops, lift up and out of the rails.

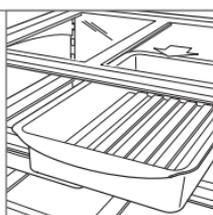


9 Refrigerator Pull-Out Shelf

The bottom shelf pulls out for easy access to condiments and other items commonly stored on door shelves. Adjustable rails keep items snugly in place. To adjust, pull the rail up and rotate.

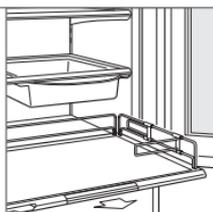


10 Ice Container

The automatic ice maker and ice container are located in the bottom freezer drawer. To remove the ice container, pull the lower freezer drawer forward until it stops, then lift the container up and out.

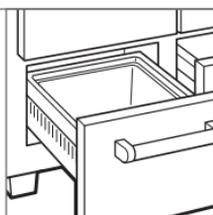

11 External Touch Display

Indicates temperature of refrigerator and freezer sections, ice maker status, air purification filter replacement notice and service alerts without opening the door.

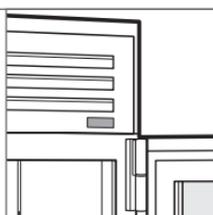

For service and support, call 800-222-7820, or visit subzero.com.



9015253-002\$REVA