

wolfappliance.com 800.222.7820


CONTENTS

2 Filter, charcoal


Note: The charcoal filters should be replaced after 200 hours of use.

CEILING-MOUNTED HOODS AND UNDER-CABINET HOOD INSERTS RECIRCULATING FILTERS INSTALLATION

- 1 Pull down the front edge of the bottom panel of the hood and allow it to rotate downward.
- 2 Remove the mesh filters.

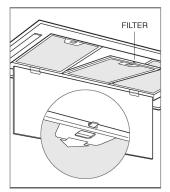

3 Place the recirculating filters on both sides of the blower and rotate the filters counter-clockwise to secure.

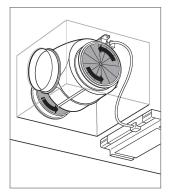

4 Install the mesh filters and rotate the bottom cover upward and into position.

