



Convection Steam and Speed Oven Showroom Mode Installation

wolfappliance.com 800.222.7820

SPEED OVEN

CONTENTS (PART #821106)

1	Step-up transformer
1	Showroom power cord, 240 V

The kit is required to run Speed Ovens in Showroom mode (Demo mode). The lights and controls will work in Showroom mode. All other operation is disabled.

ENTER SHOWROOM MODE

- 1 Touch Settings five times.
- 2 Touch 1.
- 3 Touch Start. "DEMO ON" appears on the control panel display. "DEMO" remains on the display.

CONVECTION STEAM OVEN (WITH TOUCH CONTROLS)

CONTENTS (PART #821106)

1	Step-up transformer
1	Showroom power cord, 240 V

All current Convection Steam Oven models do not have a knob.

The kit is required to run Convection Steam Ovens in Showroom mode (Demo mode). The lights and controls will work in Showroom mode. All other operation is disabled.

ENTER SHOWROOM MODE

- 1 With the oven on, touch Settings.
- 2 Use the arrows to select Demo mode.
- 3 Touch Enter. "SWITCH DEMO MODE ON" appears on the display.
- 4 Touch Enter to choose the Demo mode icon. "ENTER PASSWORD" appears.
- 5 Use the arrows to go to each number and touch Enter to confirm each number.

Note: The password is 6301.

- 6 Use the arrows to go to the check mark icon and touch Enter to confirm. "DEMO MODE ON" appears on the display.

Note: When in Showroom mode, a check mark will appear over the Demo mode icon in the Settings menu to indicate it is active.

CONVECTION STEAM OVEN (WITH KNOB)

CONTENTS (PART #821106)

1	120 V to 240 V transformer
---	----------------------------

All earlier Convection Steam Oven models have a knob.

ENTER SHOWROOM MODE

- 1 Turn off the unit. The control panel should be dark.
- 2 Press and hold Light, OK, and Off simultaneously until <<Demo-Modus>><<off>> appears.
- 3 Turn the knob until <<Demo-Modus>><<on>> appears on the display.
- 4 Press OK to confirm the change in setting.
- 5 Press Off to exit settings.

