

OVEN DOOR COMPONENTS:

Oven Door Removal

To remove oven door(s):

1. Open the door to its fully opened position.
2. With fingertip or small screwdriver, rotate hinge lock towards oven door (See Figure 4-1).
3. Lift oven door to about a 60 degree angle from horizontal. Now, pull door away from oven while continuing to lift and remove.

To reinstall oven door(s):

1. Grasp oven door on opposite sides and lift door until hinges are aligned with the openings in oven frame. Hold door at about a 30 degree angle from vertical. Slide hinges into openings until the bottom hinge arms drop fully into hinge receptacles.
2. Lower the door to fully opened position and rotate hinge lock towards oven frame. Open and close door completely to ensure it is properly installed.

Door Adjustments

To adjust doors for height, loosen the screws on the hinge pocket. Now, raise or lower the oven door to the desired height. Next, retighten the hinge pocket screws. Do this procedure for each side of the oven door until the desired height is obtained.

Door Gasket Removal

First, open the oven door. Now, locate the small clips attached to the underside of gasket and gently pull the clips from mounting holes. Next, pull the ends of the gasket out from the bottom front of the oven cavity and remove (See Figure 4-2).

Outer Door Skin Assembly Removal

To access and remove the door components, first remove the oven door assembly and lay it face down on a protected, smooth, clean and flat surface:

1. Extract the screws on the inside top of door liner that are located inside the door stop bushings (See Figure 4-3).
2. Extract screws at bottom of outer door skin. Then, lift inner door assembly off outer door skin and set aside.

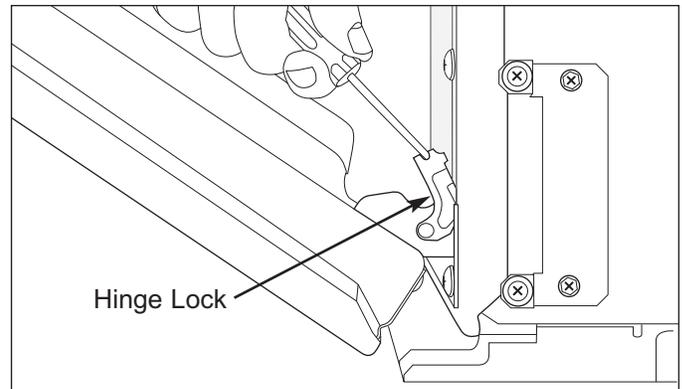


Figure 4-1. Door Removal.

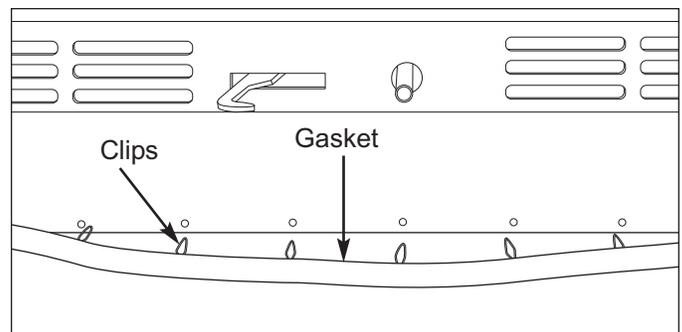


Figure 4-2. Door Gasket Removal.

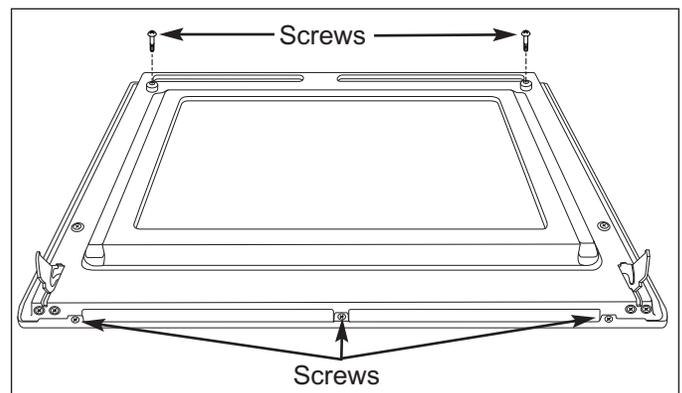


Figure 4-3. Door Skin Removal.