



# Built-In Coffee System

## BEVERAGE MENU QUICK START GUIDE

	BEVERAGE	RATIO	SMALL	MEDIUM*	LARGE	X-LARGE
	Espresso	100% COFFEE	1.0 oz (30 ml)	1.4 oz (41 ml)	1.6 oz (47 ml)	4.1 oz (121 ml)
	Espresso x2 <sup>†</sup>	100% COFFEE	2.0 oz (59 ml)	2.7 oz (80 ml)	3.2 oz (95 ml)	8.1 oz (240 ml)
	Doppio+	100% COFFEE	3.2 oz (95 ml)	4.1 oz (121 ml)	4.9 oz (145 ml)	6.1 oz (180 ml)
	Coffee	100% COFFEE	4.9 oz (145 ml)	6.1 oz (180 ml)	7.3 oz (216 ml)	8.1 oz (240 ml)
	Long Coffee <sup>‡</sup>	100% COFFEE	4.3 oz (127 ml)	5.4 oz (160 ml)	6.5 oz (192 ml)	8.1 oz (240 ml)
	Coffee Pot	100% COFFEE	10.1 oz (299 ml)	15.2 oz (450 ml)	20.3 oz (600 ml)	25.4 oz (751 ml)
	Americano	25% COFFEE/75% WATER	4.1 oz (121 ml)	5.1 oz (151 ml)	6.1 oz (180 ml)	7.6 oz (225 ml)
	Latte	20% COFFEE/80% MILK (NO FROTH)	8.1 oz (240 ml)	10.1 oz (299 ml)	12.2 oz (361 ml)	15.2 oz (450 ml)
	Macchiato	60% COFFEE/40% MILK (MAX FROTH)	1.4 oz (41 ml)	1.7 oz (50 ml)	2.0 oz (59 ml)	2.5 oz (74 ml)
	Latte Macchiato	20% COFFEE/80% MILK (MIN FROTH)	4.1 oz (121 ml)	5.1 oz (151 ml)	6.1 oz (180 ml)	7.6 oz (225 ml)
	Cappuccino**	55% COFFEE/45% MILK (MAX FROTH)	4.1 oz (121 ml)	5.1 oz (151 ml)	6.1 oz (180 ml)	7.6 oz (225 ml)
	Cappuccino Mix <sup>††</sup>	55% COFFEE/45% MILK (MAX FROTH)	4.1 oz (121 ml)	5.1 oz (151 ml)	6.1 oz (180 ml)	7.6 oz (225 ml)
	Cappuccino+	65% COFFEE/35% MILK (MAX FROTH)	4.1 oz (121 ml)	6.4 oz (189 ml)	7.7 oz (228 ml)	9.6 oz (284 ml)
	Flat White	25% COFFEE/75% MILK (MIN FROTH)	7.0 oz (207 ml)	8.8 oz (260 ml)	10.5 oz (311 ml)	13.2 oz (390 ml)
	Hot Milk	100% MILK (ANY FROTH)	6.5 oz (192 ml)	8.1 oz (240 ml)	9.7 oz (287 ml)	12.2 oz (361 ml)
	Hot Water	100% WATER				8.5 oz <sup>‡‡</sup> (251 ml)
	Steam	100% WATER				3.0 oz <sup>‡‡</sup> (89 ml)

\* DEFAULT QUANTITY  
\*\* MILK DISPENSED, THEN COFFEE

† INTENDED FOR TWO SEPARATE CUPS  
†† MILK AND COFFEE DISPENSED SIMULTANEOUSLY

‡ DOUBLE STRENGTH  
‡‡ TOUCH STOP AT ANY TIME FOR SMALLER QUANTITY

# Built-In Coffee System

## CARE RECOMMENDATIONS AND OPERATION

### OPERATION

#### SETTING FAVORITES

- 1 Touch to select the desired user profile.
- 2 Touch .
- 3 Select the desired drink option.
- 4 Touch **+** or **-** to select the desired strength.
- 5 Touch OK.
- 6 Turn the milk container dial to .
- 7 Milk is dispensed. Touch STOP when the desired amount of milk is dispensed and to save the setting.
- 8 Coffee is dispensed. Touch STOP when the desired amount of coffee is dispensed and to save the setting.

#### FROTHING MILK

- 1 Turn the knob on the milk container to "Insert."
- 2 Place the milk container into the receptacle. A beep indicates the container is installed correctly.
- 3 Turn the knob to the desired froth setting. The milk container dial is adjustable for optimum froth production.

SETTING	AMOUNT
	No Froth
	Minimum Froth
	Maximum Froth

- 4 Turn the knob to "Clean" when dispensing is complete.
- 5 Follow the instructions on the touchscreen.
- 6 Remove the milk container and store in the refrigerator.

#### COFFEE DRINKS

NOTE: Do not use oily, caramelized, or flavored beans.

- 1 Touch multiple times to select the desired strength.
- 2 Touch multiple times to select the desired size.
- 3 Touch the desired drink type to start the cycle.
- 4 Adjust the height of the coffee spout to be as close to the cup as possible.

NOTE: Near the end of the cycle, +Extra appears on the touchscreen. If desired, touch +Extra to continue dispensing water over the grounds to increase the drink volume. Touch STOP once the desired volume is dispensed.

### CLEANING

#### MILK CONTAINER

NOTE: Only the milk container liner is dishwasher safe. Do not place any other milk container parts in the dishwasher. Do not submerge the lid or the milk container in water. Use hot water and a mild detergent to wash the lid and milk container.

- 1 Press the tabs on both sides of the milk container lid, then remove the lid.
- 2 Pull the intake tube down to remove.
- 3 Pull the milk spout back to remove. (image 1)
- 4 Rotate the froth adjustment knob to "Insert," then pull the knob to remove. (image 2)
- 5 Use a toothpick to remove any debris from the channel on the knob.
- 6 Remove the liner from the milk container. (image 3)




#### DRIP TRAY & GROUNDS CONTAINER

- 1 Empty and clean the drip tray before the water level indicator protrudes from the cup tray.
- 2 Empty and clean the grounds container when "Empty grounds container" appears.
- 3 Open the service door.
- 4 Remove and empty the drip tray and grounds container.
- 5 Wash with warm water and mild dish soap.
- 6 Rinse and towel dry.

#### INFUSER

- 1 Clean the infuser at least once a month.
- 2 Turn the unit off.
- 3 Open the service door and remove the drip tray and grounds container.
- 4 Press the two red buttons inward and remove the infuser.
- 5 Soak in water approximately five minutes, then rinse and towel dry. NOTE: Do not use detergent to clean the infuser. It will remove the lubricant on interior parts. (see image above)
- 6 Slide the infuser onto the internal support and bottom pin, then press "Push" until it clicks.
- 7 Verify the red buttons are pushed out.

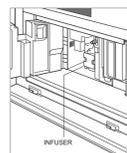

### DESCALE

NOTE: Only use EcoDecalk descaling solution.

- 1 Remove the water tank and empty completely.



- 2 Pour descaling solution into the tank to line "A," then add water until it reaches line "B."
- 3 Install the water tank.
- 4 Install the water spout, then place a large, minimum 85 oz (2.5 L), container under the spout.
- 5 Touch .
- 6 Touch or until "Descal" appears on the touchscreen.
- 7 Touch .
- 8 "Descaling" and a progress bar appear on the touchscreen.
- 9 After approximately 25 minutes, "Rinse and fill water tank up to max level" appears. Rinse and fill the water tank with water and empty the container.
- 10 Install the water tank and place the container under the spout.
- 11 Touch NEXT. "Rinsing please wait" appears on the touchscreen. The water tank may need to be filled multiple times to complete the descale process.
- 12 When "Descal complete press OK" appears, fill the water tank, and touch OK.

