



## 4201310, 4201320, 4201330, 4202860 BLOCKING KIT

**4201310 - 30" USED ON MODELS 611, 611G**  
**4201320 - 36" USED ON MODELS 601F, 601R, 601RG, 650, 650G, 661**  
**4201330 - 48" USED ON MODELS 632, 69532, 590**  
**4202860 - 42" USED ON MODELS 642, 685**

CONTAINS	QUANTITY	DESCRIPTION
	1	Wood Block
	2	"L" Brackets
	8	#12 Screws
	1	Instruction Sheet

To help prevent the unit from tipping forward under certain load conditions and to provide a more stable installation, there must be a solid soffit above the unit or a wood block.

If there is a solid soffit above the unit with clearance between the unit and the soffit of one inch or less, as illustrated in Figure 1, then a blocking kit is not needed. If this is not the case, **YOU MUST BLOCK THE UNIT** (See figure 2).

To block the unit, follow these steps:


1. Before installing the unit, locate and mark two wall studs at the back wall where the unit will be located (See Figure 3).
2. Position the wood block so it will sit no more than 1" (25MM) above the top of the appliance when installed, then mark the L-bracket mounting holes in line with the studs located in step 1.

*NOTE: The block must extend a minimum of 3" (76 mm) over the unit (See Figure 3).*


3. Secure the block to the wall over the unit using the screws and "L" brackets provided, making sure the screws extend a minimum of 7/8" (22 mm) into each of the two wall studs.
4. After the blocking components are in place, refer to the complete installation manual and proceed with the final installation and leveling of the unit.

If you have any questions about the installation of this blocking kit, contact the Sub-Zero Customer Service Department, phone number 800-222-7820.

**FIGURE 1**

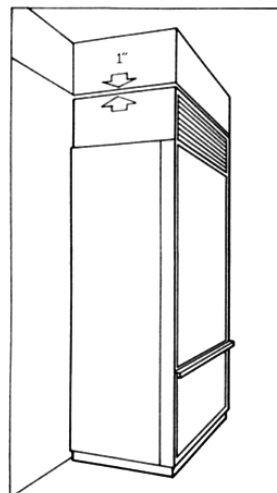

**FIGURE 2**

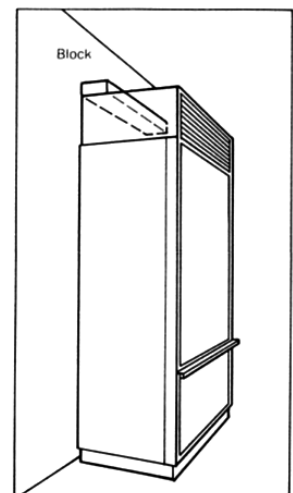

**FIGURE 3**

