


## CONTENTS

- 1 Panel, top
- 4 Screw


**Note:** A side panel should be installed prior to a top panel to ensure proper alignment, if applicable.

## PROFESSIONAL TOP PANEL INSTALLATION

- 1 Rotate the bottom of the grille upward.

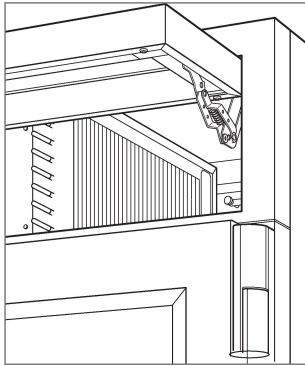

- 2 Disconnect the network cable, then remove the center mounting screw.
- 3 Loosen the three bolts from the grille, then pull the grille forward to remove.

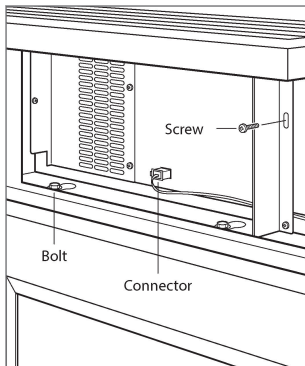

- 4 Place the top panel on the unit shroud with the longer flange toward the back of the unit.

- 5 Install two screws in front and two in the back to secure the top panel.

