Integrated Module Filler Strip Kit

Installation Instructions

Kit Number 802726

• For use with Wolf Modules:

CT15G/S	CT15I/S
CT15E/S	IS15/S
IM15/S	IF15/S
IC15/S	

These instructions contain procedural information to install the Integrated Filer Strip in a countertop installations.

Typical Installation

Installation Procedure:

Step 1) Locate the center of the 803205 Filler Strip Bracket at the required distance from the cooktop cutout edge. The illustration locations.

Step 2) Position the 803205 Filler Strip Bracket so that the top surface is flush with the countertop. You may need a straight edge to assist in locating the bracket at the correct height.

Step 3) Mark the center of the elongated slots of the 803205 Filler Strip Bracket on the front and rear of the counter cutout.

Step 4) Using a 3/32" drill bit, drill a 3/4" deep hole for the (4) 803385 #6 x 1/2" mounting screws.

A CAUTION


Please consult with the countertop manufacturer/installer for the proper method of installing screws into the inside edge of the countertop. Damage may occur if the proper methods are not used. Step 5) Secure the 803205 Filler Strip Bracket to the countertop.

Step 6) Install all cooktops into the corresponding openings.

Step 7) Preassemble the (3) 803383 #10-24 set screws into the bottom on the 802909 Filler Strip Assembly.

Step 8) Position the 802909 Filler Strip into the 803205 Filler Strip Bracket and install the (3) 730227 #10-24 KEPS Lock Nuts, but do not tighten

Step 9) Align and adjust modules and filler strips in the countertop opening. Then tighten module(s) hold-down clamps and the (3) 730227 #10-24 KEPS Lock Nuts.

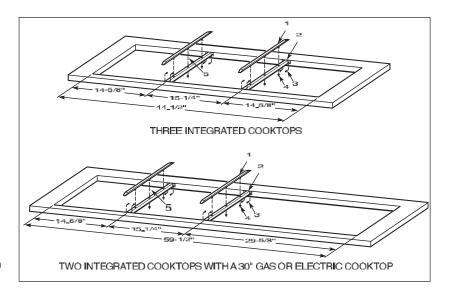

Qty	Part Number	Items Included	Item Number
1	802909	Filler Strip Assembly	1
1	803205	Filler Strip Bracket	2
4	803385	#6 x 1/2" PH Screw	3
3	730227	#10-24 KEPS Lock Nuts	4
3	803383	#10-24 Set Screws	5



Wolf Appliance Company, LLC

P.O. Box 44848

Madison, WI 53744

800-332-9513

www.wolfappliance.com

803843 REV-D 6/05